

List of car receivers compatible with KS-PD100/500 (1)

Model name	Control type	iPod/D.PLAYER control level	Compatibility
KD-ADV38	C	2	OK
KD-ADV5380	B	2	OK
KD-ADV6160	B	1	OK
KD-ADV6270	B	2	OK
KD-ADV7380	B	2	OK
KD-AR300	B	1	OK
KD-AR3000	B	1	OK
KD-AR360	B	1	OK
KD-AR370	B	2	OK
KD-AR400	B	1	OK
KD-AR470	B	1	OK
KD-AR480	B	2	OK
KD-AR5000	E	1	OK
KD-AR5500	E	1	OK
KD-AR560	B	1	OK
KD-AR600	B	1	OK
KD-AR7000	C	1	OK
KD-AR7500	C	1	OK
KD-AR760	B	1	OK
KD-AR770	B	2	OK
KD-AR780	B	2	OK
KD-AR800	B	1	OK
KD-AR8500	C	1	OK
KD-AR860	C	1	OK
KD-AR870	B	2	OK
KD-AR880	B	2	OK
KD-AR960	C	1	OK
KD-AV7000	E	1	OK
KD-AV7001	E	1	OK
KD-AV7005	E	1	OK
KD-AV7008	E	1	OK
KD-AV7010	E	1	OK
KD-AVX1	C	1	OK
KD-AVX11	C	2	OK
KD-AVX2	C	2	OK
KD-AVX33	C	2	OK
KD-BT1	B	2	OK
KD-DV4200	B	2	OK
KD-DV4201	B	2	OK
KD-DV4202	B	2	OK
KD-DV4203	B	2	OK
KD-DV4204	B	2	OK
KD-DV4205	B	2	OK
KD-DV4206	B	2	OK
KD-DV4207	B	2	OK
KD-DV4288	B	2	OK
KD-DV4299	B	2	OK
KD-DV4304	B	2	OK
KD-DV4305	B	2	OK
KD-DV4306	B	2	OK
KD-DV4388	B	2	OK
KD-DV5000	B	1	OK
KD-DV5100	B	1	OK
KD-DV5101	-	-	NO
KD-DV5103	B	1	OK
KD-DV5104	B	1	OK
KD-DV5105	B	1	OK
KD-DV5108	B	1	OK
KD-DV5188	B	1	OK
KD-DV5201	B	1	OK
KD-DV5202	B	1	OK
KD-DV5205	B	1	OK
KD-DV5206	B	1	OK
KD-DV5300	B	2	OK
KD-DV5301	B	2	OK
KD-DV5302	B	2	OK
KD-DV5304	B	2	OK
KD-DV5305	B	2	OK
KD-DV5306	B	2	OK
KD-DV5307	B	2	OK
KD-DV5308	B	2	OK
KD-DV5388	B	2	OK
KD-DV6101	B	1	OK
KD-DV6102	B	1	OK
KD-DV6103	B	1	OK
KD-DV6104	B	1	OK
KD-DV6105	B	1	OK
KD-DV6106	B	1	OK
KD-DV6107	B	1	OK

List of car receivers compatible with KS-PD100/500 (2)

Model name	Control type	iPod/D.PLAYER control level	Compatibility
KD-DV6108	B	1	OK
KD-DV6200	B	2	OK
KD-DV6201	B	2	OK
KD-DV6202	B	2	OK
KD-DV6205	B	1	OK
KD-DV6206	B	1	OK
KD-DV6207	B	2	OK
KD-DV7203	B	2	OK
KD-DV7204	B	2	OK
KD-DV7205	B	2	OK
KD-DV7206	B	2	OK
KD-DV7300	B	2	OK
KD-DV7301	B	2	OK
KD-DV7302	B	2	OK
KD-DV7304	B	2	OK
KD-DV7305	B	2	OK
KD-DV7306	B	2	OK
KD-DV7307	B	2	OK
KD-DV7308	B	2	OK
KD-DV7388	B	2	OK
KD-DV8305	B	2	OK
KD-DV8306	B	2	OK
KD-DV8388	B	2	OK
KD-DVH426	B	2	OK
KD-G255	-	-	NO
KD-G258	-	-	NO
KD-G285	-	-	NO
KD-G301	-	-	NO
KD-G302	-	-	NO
KD-G305	-	-	NO
KD-G308	-	-	NO
KD-G309	B	1	OK
KD-G310	B	1	OK
KD-G318	-	-	NO
KD-G320	B	2	OK
KD-G369	B	1	OK
KD-G400	B	1	OK
KD-G409	B	1	OK
KD-G420	B	1	OK
KD-G421	B	2	OK
KD-G424	B	2	OK
KD-G425	B	2	OK
KD-G426	B	2	OK
KD-G427	B	2	OK
KD-G430	B	2	OK
KD-G431	B	2	OK
KD-G434	B	2	OK
KD-G435	B	2	OK
KD-G436	B	2	OK
KD-G437	B	2	OK
KD-G455	B	1	OK
KD-G456	B	1	OK
KD-G464	B	1	OK
KD-G465	B	1	OK
KD-G489	B	2	OK
KD-G498	-	-	NO
KD-G501	B	1	OK
KD-G502	B	1	OK
KD-G505	B	1	OK
KD-G507	B	1	OK
KD-G510	B	1	OK
KD-G511	B	1	OK
KD-G514	B	1	OK
KD-G515	B	1	OK
KD-G521	B	1	OK
KD-G524	B	1	OK
KD-G525	B	1	OK
KD-G527	B	1	OK
KD-G531	B	2	OK
KD-G534	B	2	OK
KD-G535	B	2	OK
KD-G536	B	2	OK
KD-G537	B	2	OK
KD-G538	B	2	OK
KD-G569	B	1	OK
KD-G611	B	1	OK
KD-G612	B	1	OK
KD-G614	B	1	OK
KD-G615	B	1	OK

List of car receivers compatible with KS-PD100/500 (3)

Model name	Control type	iPod/D.PLAYER control level	Compatibility
KD-G617	B	1	OK
KD-G631	B	2	OK
KD-G632	B	2	OK
KD-G634	B	2	OK
KD-G635	B	2	OK
KD-G637	B	2	OK
KD-G638	B	2	OK
KD-G710	B	1	OK
KD-G720	B	2	OK
KD-G721	B	2	OK
KD-G722	B	2	OK
KD-G724	B	2	OK
KD-G725	B	2	OK
KD-G727	B	2	OK
KD-G730	B	2	OK
KD-G731	B	2	OK
KD-G734	B	2	OK
KD-G735	B	2	OK
KD-G737	B	2	OK
KD-G738	B	2	OK
KD-G800	B	1	OK
KD-G801	B	1	OK
KD-G805	B	1	OK
KD-G807	B	1	OK
KD-G814	B	1	OK
KD-G815	B	1	OK
KD-G820	B	2	OK
KD-G821	B	2	OK
KD-G824	B	2	OK
KD-G825	B	2	OK
KD-G827	B	2	OK
KD-G828	B	2	OK
KD-G830	B	2	OK
KD-G889	B	2	OK
KD-HDR1	B	2	OK
KD-HDW10	B	2	OK
KD-LH1100	B	1	OK
KD-LH1101	B	1	OK
KD-LH1105	B	1	OK
KD-LH1150	B	1	OK
KD-LH2000	-	-	NO
KD-LH300	B	1	OK
KD-LH305	B	1	OK
KD-LH3100	B	1	OK
KD-LH3101	B	1	OK
KD-LH3105	B	1	OK
KD-LH3150	B	1	OK
KD-LH401	B	1	OK
KD-LH70R	B	1	OK
KD-LH810	C	1	OK
KD-LH811	C	1	OK
KD-LH910	C	1	OK
KD-LH911	C	1	OK
KD-LH915	C	1	OK
KD-LH917	C	1	OK
KD-LHX500	E	1	OK
KD-LHX501	E	1	OK
KD-LHX502	E	1	OK
KD-LHX505	E	1	OK
KD-LHX550	E	1	OK
KD-LHX551	E	1	OK
KD-LHX552	E	1	OK
KD-LHX555	E	1	OK
KD-LHX557	E	1	OK
KD-LHX601	B	1	OK
KD-LX555R	A	1	OK
KD-NX10	-	-	NO
KD-NX5000	C	2	OK
KD-NX901	D	1	OK
KD-S100	C	2	OK
KD-S31	A	1	OK
KD-S32	B	1	OK
KD-S33	B	2	OK
KD-S51	B	1	OK
KD-S52	B	1	OK
KD-S71R	-	-	NO
KD-S73R	-	-	NO
KD-S741R	-	-	NO
KD-S743R	-	-	NO

List of car receivers compatible with KS-PD100/500 (4)

Model name	Control type	iPod/D.PLAYER control level	Compatibility
KD-S845	-	-	NO
KD-S847	-	-	NO
KD-S890	-	-	NO
KD-S891R	-	-	NO
KD-S895	-	-	NO
KD-SC500	-	-	NO
KD-SC601	B	1	OK
KD-SC605	B	1	OK
KD-SC607	B	1	OK
KD-SD700	C	1	OK
KD-SH1000	C	2	OK
KD-SH909RB	-	-	NO
KD-SH9101	B	1	OK
KD-SH9102	B	1	OK
KD-SH9103	B	1	OK
KD-SH9104	B	1	OK
KD-SH9105	B	1	OK
KD-SH9700	B	1	OK
KD-SH9750	B	1	OK
KD-SHX700	C	1	OK
KD-SHX701	C	1	OK
KD-SHX701T	C	1	OK
KD-SHX705	C	1	OK
KD-SHX750	C	1	OK
KD-SHX751	C	1	OK
KD-SHX850	C	1	OK
KD-SHX851	C	1	OK
KD-SHX855	C	1	OK
KD-SHX900	C	1	OK
KD-SV3104	A	1	OK
KD-SV3105	A	1	OK
KD-SV3204	A	2	OK
KD-SV3205	A	2	OK
KD-SV3208	A	2	OK
KD-SV3305	A	2	OK
KD-SX50M	-	-	NO
KD-SX60WT	-	-	NO
KD-SX695	-	-	NO
KD-SX745	-	-	NO
KD-SX8350	-	-	NO
KD-SX841R	-	-	NO
KD-SX9350	B	1	OK
KD-SX947R	B	1	OK
KD-SX990	B	1	OK
KD-SX995	B	1	OK
KD-SX997R	B	1	OK
KD-SX998R	B	1	OK
KS-FX220	-	-	NO
KS-FX222	-	-	NO
KS-FX282	-	-	NO
KS-FX300	-	-	NO
KS-FX321	-	-	NO
KS-FX321S	-	-	NO
KS-FX321G	-	-	NO
KS-FX381	-	-	NO
KS-FX384	-	-	NO
KS-FX385	-	-	NO
KS-FX385S	-	-	NO
KS-FX385G	-	-	NO
KS-FX43R	-	-	NO
KS-FX480R	-	-	NO
KS-FX483R	-	-	NO
KS-FX490	B	1	OK
KS-FX555	-	-	NO
KS-FX621	-	-	NO
KS-FX742R	-	-	NO
KS-FX771	-	-	NO
KS-FX8	-	-	NO
KS-FX842R	-	-	NO
KS-FX845R	-	-	NO
KS-FX921	B	1	OK
KS-FX942R	B	1	OK
KS-FX945R	B	1	OK
KS-LH60R	B	1	OK
KS-T707	-	-	NO
KS-T807	-	-	NO
KW-AVX700	C	2	OK
KW-AVX701	C	2	OK
KW-AVX706	C	2	OK

List of car receivers compatible with KS-PD100/500 (5)

Model name	Control type	iPod/D.PLAYER control level	Compatibility
KW-AVX708	C	2	OK
KW-AVX800	E	2	OK
KW-AVX805	E	2	OK
KW-AVX900	E	2	OK
KW-AVX905	E	2	OK
KW-S601	B	2	OK
KW-TC100	B	1	OK
KW-TC101	B	1	OK
KW-TC102	B	1	OK
KW-TC110	B	1	OK
KW-TC111	B	1	OK
KW-TC400	B	1	OK
KW-TC401	B	1	OK
KW-TC402	B	1	OK
KW-TC410	B	1	OK
KW-TC411	B	1	OK
KW-XC105	B	1	OK
KW-XC400	B	1	OK
KW-XC404	B	1	OK
KW-XC405	B	1	OK
KW-XC406	B	1	OK
KW-XC407	B	1	OK
KW-XC410	B	1	OK
KW-XC55	-	-	NO
KW-XC66	-	-	NO
KW-XC77	-	-	NO
KW-XC777	-	-	NO
KW-XC828	-	-	NO
KW-XC838	-	-	NO
KW-XC858	-	-	NO
KW-XC877	-	-	NO
KW-XC88	-	-	NO
KW-XC888	-	-	NO
KW-XC899	-	-	NO
KW-XC939	-	-	NO
KW-XG500	B	2	OK
KW-XG504	B	2	OK
KW-XG505	B	2	OK
KW-XG506	B	2	OK
KW-XG508	B	2	OK
KW-XG700	B	2	OK
KW-XG701	B	2	OK
KW-XG704	B	2	OK
KW-XG705	B	2	OK
KW-XG706	B	2	OK
KW-XG707	B	2	OK
KW-XG708	B	2	OK